

# BEAUTURAL

## Haircut Kit



1byone Products Inc.  
1230 E Belmont Street, Ontario, CA 91761  
Customer Service: +1 909-391-3888  
[www.1byone.com](http://www.1byone.com)

**Instruction Manual**

## IMPORTANT SAFETY INSTRUCTIONS

When using any electric products, especially when children are present, basic safety precautions should always be followed.

**DANGER** - To reduce the risk of electric shock:

1. Do not reach for the product if it has fallen into water. Unplug it immediately from wall power.
2. Do not use while bathing in a shower or bathtub.
3. Do not place or store the product where it can fall or be pulled into a bathtub or sink. Do not place in or drop into water or other liquids.
4. Always unplug the product from the electrical outlet immediately after using.
5. Always unplug the product before cleaning.

**WARNING** - To reduce the risk of burns, fire, electric shock, or injury to persons:

1. This product should never be left unattended when plugged in.
2. Close supervision is necessary when this product is used by, on, or near children or dependents.
3. Use this product only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
4. Never operate this product if it has a damaged cord, if the plug is not working properly, if it has been dropped or damaged, or if it has been dropped into water. Return the product to a service center for examination and repair.
5. Keep the product's power cord away from heated surfaces.
6. Never operate the product with the air openings blocked or while it is placed on a soft surface which may block the air openings, such as a bed or sofa. Keep the air openings free of lint, hair, and similar materials.
7. Never drop or insert any objects into any of the product's openings.
8. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
9. This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the product by a person responsible for their safety. Children should be supervised to ensure that they do not play with the product.

10. To reduce the risk of electric shock, this product has a polarized plug (one prong is wider than the other). This plug only fits into a polarized outlet in one orientation. In the event the plug does not fit fully into the outlet, reverse the plug's orientation. In the event it still does not fit, contact a qualified electrician to install a proper outlet. Do not attempt to modify the plug in any way.
11. If the product's power cord is damaged, it must be replaced by the manufacturer, the service agent or similarly qualified persons in order to avoid any further hazard.
12. Always attach the power cord to the product first before inserting the cord's plug into the outlet. To disconnect, first turn all the product's controls to "off," then remove the plug from the outlet.
13. Do not use this product with damaged or broken attachment guide combs, as this may cause facial injuries.

## SAVE THESE INSTRUCTIONS

**These Clippers Have Been Designed For Household Use Only**

## GUIDE COMB SPECIFICATIONS

#½ (1.5mm) 1/16"	
#1 (3mm) 1/8"	
#1½ (4.5mm) 3/16"	
#2 (6mm) 1/4"	
#3 (9mm) 3/8"	
#4 (13mm) 1/2"	
#5 (16mm) 5/8"	
#6 (19mm) 3/4"	
#7 (22mm) 7/8"	
#8 (25mm) 1"	

### Attaching The Guide Combs

Align each comb onto the blades, then press down on the nameplate until you hear a snap.




### Removing The Guide Combs

From underneath, lift up each comb's tab to release from the blades.

#### Note:

1. Always start with the largest guide comb, then use shorter combs if a shorter length is desired.
2. Cut only a small amount until you become accustomed to how long each guide comb leaves the hair.
3. Cut slowly and smoothly. Do not force the clippers through the hair.
4. When turning the clippers on or off, a 'DADA' noise and accompanying heat and vibration will be produced. This is normal and does not impact operation.

## CLIPPER MAINTENANCE

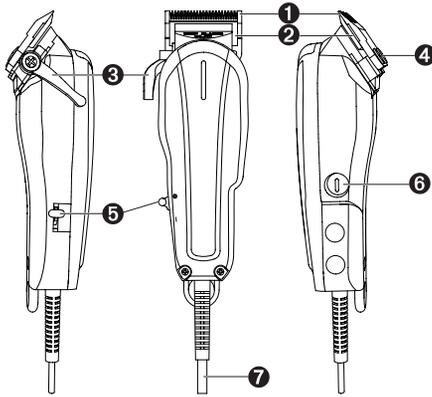

1. Fixed Cutter
2. Movable Cutter
3. Taper Lever
4. Fixed Cutter Screw
5. On/Off Switch
6. Power Screw
7. Power Cable

### Aligning the Clipper Blades

The blades of each cutter are aligned before leaving the factory. Collision or impact during transportation may dislocate the blades, or the blades may become unaligned or in need of maintenance after a long period of use. Follow the instructions below to confirm the cutter blades are correctly aligned.

1. Position the taper lever to the closest cut position and loosen the blade screws.
2. The movable cutter should be approximately 0.45-0.88mm back from the fixed cutter.
3. The leftmost tooth blade of the fixed cutter must cover the first small tooth blade of the movable cutter.
4. The rightmost tooth blade of the fixed cutter must be touching the big tooth blade of the movable cutter.


**Note:** If blade alignment is incorrect, add a few drops of clipper oil to the blades, turn the clippers "ON" for a few moments, then turn "OFF" and unplug. Loosen the screws slightly and adjust. Tighten the screws after the blades have been aligned. Other than blades, these clippers have no user-serviceable parts.

## Oil

The clipper blades should be oiled every few haircuts. Simply place a few drops of clipper oil on the teeth of the blades. Do not use hair oil, grease or any oil mixed with kerosene or any solvent. Please use included clipper oil or purchase natural clipper oil that doesn't contain solvents.

## Power Screw

Your clippers have a power screw to adjust voltage. This screw is set to a position for a 120V voltage rating before leaving the factory. However, if the voltage in your home or current location is lower, you may need to readjust this screw. To adjust for the difference in voltage power, turn the clippers on and use a screwdriver to turn the power screw in a clockwise direction until you hear a noise. Next, slowly turn the power screw in a counterclockwise direction and stop just as the noise stops. This will set to clippers to the maximum power setting available in your home or current location.

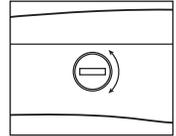


## Caring for the Power Cord

The power cord should not be used to pull or support the clippers. Since freedom of movement needs to be maintained, care should be used to keep the cord untwisted and unobstructed. When stored, the cord should be coiled and the haircut kit placed in its original box, away from children.

**For clippers with a polarized plug:** The clippers have a polarized plug (one prong is wider than the other) to reduce the risk of electric shock. This plug fits into polarized outlets in only one orientation. In the event the plug does not fit fully in the outlet, reverse the plug's orientation. **Do not modify the plug in any way.**

## Taper Lever

These clippers are equipped with an adjustable taper lever. The taper lever is conveniently located near the user's thumb (if right-handed) so it can be easily adjusted while the clippers are held. The taper lever adds versatility to the clippers, allowing gradual changes in closeness of cutting without using the guide comb. When the lever is in the uppermost position, pushing the lever downward gradually increases the cutting length. The taper lever will also extend the blades' longevity since a different cutting edge is used in each setting.

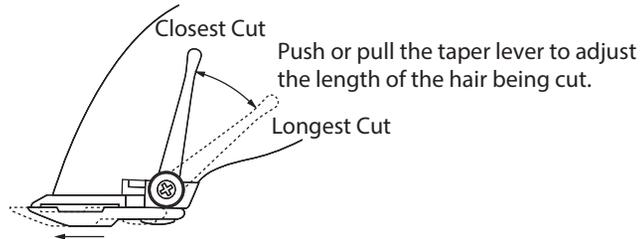

In addition, if extremely heavy haircutting has jammed the cutters, adjusting the taper lever will help remove hair that has become wedged between the two cutters without having to remove them. While the clippers are running, rapidly move the lever from "closest cut" to "longest cut" a few times. Doing this each time cutting is finished will keep the cutters and blades clean of cut hair.

## MAINTENANCE AND CARE

- After each use, wipe the clippers with a clean cloth and use a little brush to clean away hair clippings and dirt. Finally, apply some drops of oil onto the blades.
- Do not immerse the clippers in water.
- Clippers should be kept in a dry and ventilated place, in order to prolong the product's lifespan.
- Wipe the clippers using only soft or slightly damp cloths. Never use solvents or scouring agents.
- The cutting blades can be cleaned with a hygienic spray. Do not use any other cleaning agents.
- If cutting performance deteriorates after long use despite regular cleaning and oiling, the cutting blades should be replaced.
- Always use the blade protective cover when the clippers are not in use. This will help prevent accidental damage and blade dulling.

## SPECIFICATIONS

Rated Voltage: AC 120V~60Hz

Rated Power: 6-7W

## Disposal

### Disposal of the Appliance



Under no circumstances should you dispose of the appliance in normal domestic waste.

This product is subject to the provisions of European Directive 2012/19/EU.

Dispose of the appliance via an approved disposal company or your municipal waste facility. Please observe currently applicable regulations. Please contact your waste disposal center if you need any further information.



The appliance's packaging is made from environmentally friendly material and can be disposed of at your local recycling plant.

## Customer Service/Kundenservice/Service Clients

### Atención al cliente/Assistenza Clienti/カスタマーサービス

#### US

To ensure speedy handling of your issue, please call or email us for assistance.

Phone: +1 909-391-3888

(Mon-Fri 9:00am - 6:00pm PST)

Email: ushelp@1byone.com

#### CA

To ensure speedy handling of your issue, please email us for assistance.

Email: cahelp@1byone.com

#### UK

To ensure speedy handling of your issue, please call or email us for assistance.

Phone: +44 158 241 2681

(Mon-Fri 9:00am - 6:00pm UTC)

Email: ukwebhelp@1byone.com

#### DE

Für eine zügige Bearbeitung ihres Problems, melden Sie sich bei uns wie folgt.

Email: euhelp@1byone.com

#### FR

Pour vous assurer une assistance rapide en cas de problème, veuillez envoyer un e-mail.

Email: euhelp@1byone.com

#### ES

Para garantizar una rápida atención de su problema, favor envíenos un email para ayudarlo.

Email: euhelp@1byone.com

#### IT

Per supporto immediato in caso di bisogno, la invitiamo a contattarci via email.

Email: euhelp@1byone.com

#### JP

お客様の問題が直ちに解決されるため、ぜひメールにて弊社までご連絡ください。

Eメール : jphelp@1byone.com