




www.1byone.com

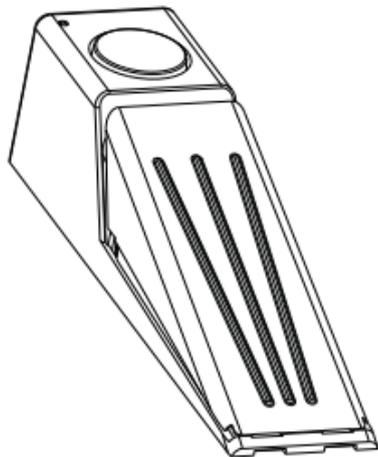

1byone Products Inc.
1230 E Belmont Street, Ontario, CA 91761
Customer Service: +1 909-391-3888
www.1byone.com


Instruction Manual
SKU: 100US-0001

Thank you for purchasing 1byone Door Stopper Alarm. Please read this instruction manual carefully before use.

1. Package Contents:

- 1 x Door Stopper Alarm
- 1 x Instruction Manual

2. Name parts:

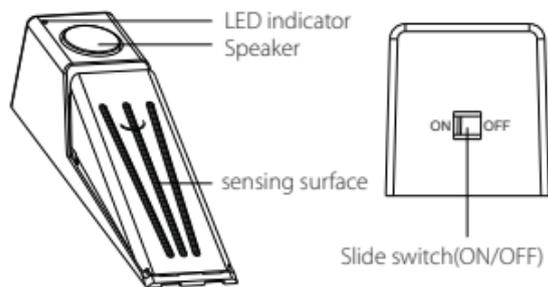



Parameters:

Voltage	DC4.5V (3 x AAA batteries)
Alarm's frequency	433.92MHz+100KHz
Power consumption:	< 0.5W
Ringing volume	Over 90dB within 0.5m/1.6ft
Working temperature	-20°C ~ 50 °C

3. Power Supply:

DC 4.5V (3x1.5V AAA batteries). Insert batteries using the following procedure:

- Remove the screw on the back of the alarm with a screwdriver and then remove the battery compartment cover.
- Insert 3 x AAA batteries into the battery compartment, using the correct polarity to eliminate the danger of fire.
- Replace the battery compartment cover and tighten the screw.

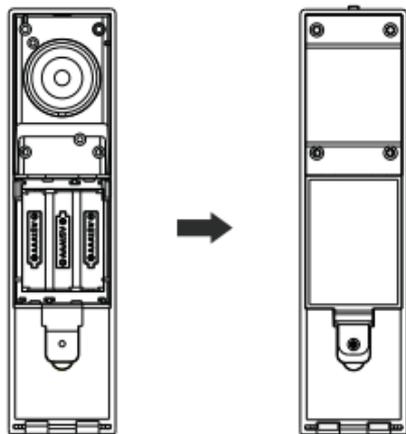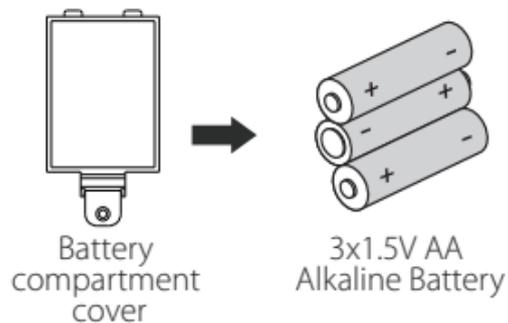

4. Operation and Installation:

After inserting the batteries (3 x AAA batteries), turn on the door stopper alarm by sliding the ON /OFF switch to the ON position.

Place the door stopper alarm at the foot of the door. When the door is opened, the door will squeeze the sensing surface of the alarm and activate the alarm. Then the alarm will play a high alarm sound to notify the host. The alarm will sound for 30 seconds when pressure is applied to the sensing surface of the door stopper, and stop after 30 seconds if pressure has been released.

Low voltage indication: When the batteries are exhausted, the LED

indicator on alarm will flash once every second reminding you to replace the batteries.

Safety note:

- The alarm is powered by 3 x AAA batteries. When exhausted, replace them using the same type and voltage batteries.
- Always insert the batteries using the correct polarity to eliminate the danger of fire.
- Keep old and new batteries away from children.
- Old batteries should be properly disposed using safe environmental practices.
- Remove the batteries from the alarm if the alarm is not to be used for an extended period of time.

Disposal

Disposal of the appliance



Under no circumstances should you dispose of the appliance in normal domestic waste. This product is subject to the provisions of European Directive 2012/19/EU.

Dispose of the appliance via an approved disposal company or your municipal waste facility. Please observe the currently applicable regulations. Please contact your waste disposal centre if you need any further information.

Disposal of batteries



Used batteries may not be disposed of in household waste.

All consumers are statutorily required to dispose of batteries at a collection point provided by their local municipality or retail store.

The purpose of this obligation is to ensure batteries are disposed of in a non-polluting manner. Only dispose of batteries when they are fully discharged.



The appliance's packaging is made from environmentally friendly material and can be disposed of at your local recycling plant.

Customer Service/Kundenservice
Service Clients/Atención al cliente
Assistenza Clienti/カスタマーサービス

US

To ensure speedy handling of your issue, please call or email us for assistance.

Phone: +1 909-391-3888

(Mon-Fri 9:00am - 6:00pm PST)

Email: ushelp@1byone.com

UK

To ensure speedy handling of your issue, please call or email us for assistance.

Phone: +44 158 241 2681

(Mon-Fri 9:00am - 6:00pm UTC)

Email: ukwebhelp@1byone.com

FR

Pour vous assurer une assistance rapide en cas de problème, veuillez envoyer un e-mail.

Email: euhelp@1byone.com

IT

Per supporto immediato in caso di bisogno, la invitiamo a contattarci via email.

Email: euhelp@1byone.com

CA

To ensure speedy handling of your issue, please email us for assistance.

Email: cahelp@1byone.com

DE

Für eine zügige Bearbeitung ihres Problems, melden Sie sich bei uns wie folgt.

Email: euhelp@1byone.com

ES

Para garantizar una rápida atención de su problema, favor envíenos un email para ayudarlo.

Email: euhelp@1byone.com

JP

お客様の問題が直ちに解決されるため、ぜひメールにて弊社までご連絡ください。

Eメール:jphelp@1byone.com